

File Name: bt freestyle phone manual.pdf

Size: 3204 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 18 May 2019, 18:53 PM

Rating: 4.6/5 from 835 votes.

Status: AVAILABLE

Last checked: 3 Minutes ago!

In order to read or download bt freestyle phone manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bt freestyle phone manual . To get started finding bt freestyle phone manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

 
bt freestyle phone manual



The answering machine is switched on. Press to select menu options displayed. Keypad locked. Delete to cancel. Delete All Delete All to cancel. Select which base station you use. New unplayed messages cannot be deleted. During playback to delete the current message. Follow the announcements and instructions you hear. Your external caller is put on hold. Play and delete old messages, see page 4850. Check that you have not exceeded the limits. It is recommended that you place your BT Freestyle 750 at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference. User Guide Page 3 Section. This User Guide provides you with all the Got everything Page 4 4 In this guide Settings BT Network Services. Handset ringtone..... Page 6 6 In this guide The answering machine is Page 9 Getting started 9 Page 11 Getting to know your phone 11 Base. Green Power light Red Charging light Find Page 14 14 Getting to know your phone Page 15 Getting to know your phone 15. Menu map. Redial List Calls List Settings Answer


Machine BT Services. Delete Details. Page 16 16 Using the phonePage 19 Using the phone 19Page 20 20 Using the phonePage 21 Using the phone 21Page 23 Phonebook 23Entering namesPage 24 24 PhonebookPage 29 Phonebook 29Page 30 30 PhonebookSelect the ringtone for External. Page 32 32 SettingsPage 33 Settings 33As long as you have auto. Page 34 34 SettingsPage 36 36 SettingsPage 37 Settings 37Page 41 Calls lists 41Page 42 42 BT Network ServicesPage 44 44 Answering machinePage 45 Answering machine 45Page 47 Answering machine 47Page 48 48 Answering machineAnswering machine messages that are. Page 50 50 Answering machinePage 53 Using additional handsets 53Page 54 54 Using additional handsetsThe display. Page 55 Using additional handsets 55Page 57 Help 57Page 59 Help 59To enable Remote access. Page 60 60 HelpPage 61 General information 61Page 62 62 General information.<http://nw-line.ru/generic/uploaded/dayton-furnace-manual.xml>

- **bt freestyle phone manual, bt freestyle phone instructions, bt freestyle 750 phone manual, bt freestyle cordless phone manual, bt freestyle phone 710 manual, bt freestyle phone user manual, bt freestyle 750 phone instructions.**

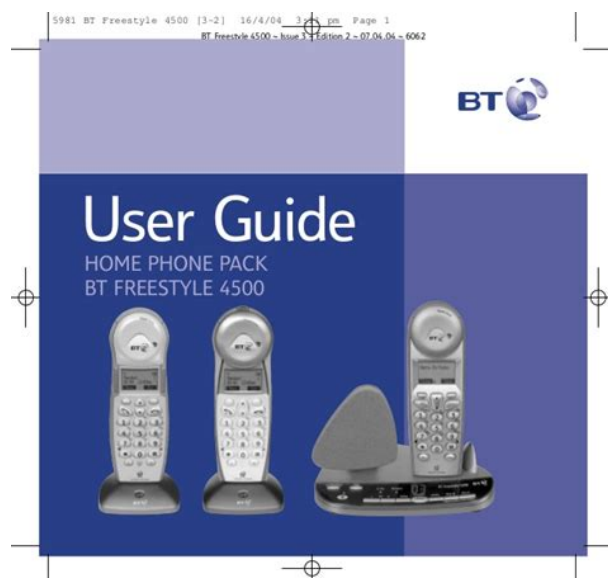

Page 63 General information 63The services described in this publication are subject to availability. Se voce continuar a navegar o site, voce aceita o uso de cookies. Leia nosso Contrato do Usuario e nossa Politica de Privacidade.Se voce continuar a utilizar o site, voce aceita o uso de cookies. Leia nossa Politica de Privacidade e nosso Contrato do Usuario para obter mais detalhes.If you wish to opt out, please close your SlideShare account. Learn more. Altere suas preferencias de anuncios quando desejar. Compartilheo! Check out, please www.HelpWriting.net Brief Description. Main Topic. Technical Note. Appendix. Glossary. Save this Book to Read bt freestyle cordless phone manual PDF eBook at our Online Library. Get bt freestyle cordless phone manual PDF file for free from our online library. PDF file bt freestyle cordless phone manual Page 1Or perhaps in case you already know a precise topic,According to our listing, the following PDF file is submitted in 25 Aug,Take full advantage of related PDF area to locate several other relevant pdf for BT. FREESTYLE CORDLESS PHONE MANUAL, just in case you missed your desired topic. It isWith more files andSave this Book to Read bt freestyle cordless phone manual PDF eBook at our Online Library. PDF file bt freestyle cordless phone manual Page 2Bt Freestyle Cordless Phone Manual Download. Bt Freestyle Cordless Phone Manual Free. Bt Freestyle Cordless Phone Manual Full. Bt Freestyle Cordless Phone Manual Pdf. Bt Freestyle Cordless Phone Manual Ppt. Bt Freestyle Cordless Phone Manual Tutorial. Bt Freestyle Cordless Phone Manual Chapter. PDF file bt freestyle cordless phone manual Page 3Bt Freestyle Cordless Phone Manual Instruction. PDF file bt freestyle cordless phone

 
manual Page 4Agora, personalize o nome do seu painel de recortes. Secrecy button and light When pressed, it stops the caller hearing you.Thank you, for helping us keep this platform clean. The editors will have a look at it as soon as possible.<http://fisheaglesafaris.net/pics/user/dayton-gas-heater-manual.xml>

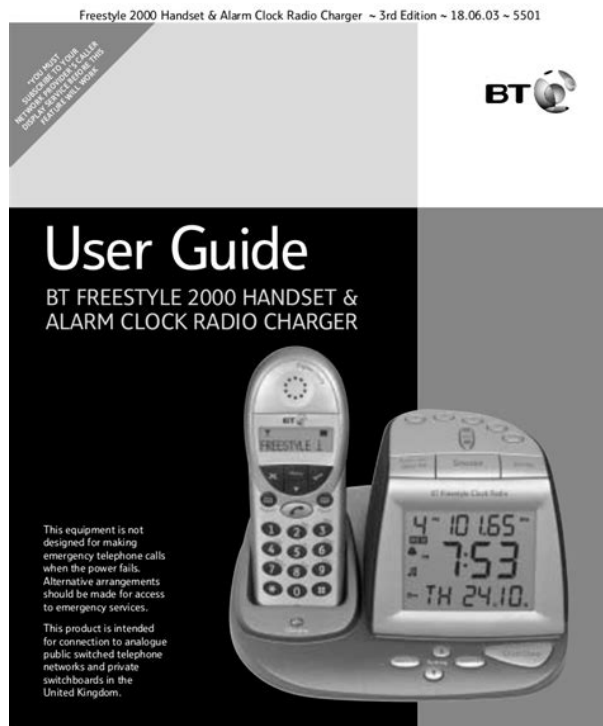

Freestyle 750 multiple pack If youThe BT Freestyle 750 has a range of 300 metres outdoors when there is a Make sure it is at least 1 metre away from other electrical clear line of sight between the base and handset. Any obstruction between appliances to avoid interference.The answering machine is If the icon flashes in the switched on.During charging, the icon will sIf you have purchased a BT Freestyle 750 multiple pack, If this product is to be used on a broadband line then you must ensure you will need to prepare any additional handsets and chargers that it is connected via an ADSL for use.Use to screen calls to the answering machine, page 47. In standby, press to open and scroll through the Redial list, page 19. When on a call, press once to mute the handset and again to switch the In talk mode, press to adjust volume, page18.When the handset is switched on and in standby Options 1. Press to open the main menu. 2. Then use or buttons to scroll through the available options. If no buttons are pressed for 30 seconds the hanTo switch on 1. Press and hold. 2. Searching is displayed, then the screen will return to standby.The handset display shows the call duratiThe display shows ON you can answer a call by lifting the handset off the base. If you have the caller's number if available or the caller's name if it switched auto answer off, you will matches an entry in the phonebook.Auto answer ON is the default setting. See page 33. 1.Press. Call Waiting Providing you have subscribed to your network's CalSecrecy Mute During a call, you can talk to someone nearby without your caller hearing. 1. Press. The display shows Muteon and your caller cannot hear you. 2. Press again to return to your caller. Handsfree Handsfree lets you talk to your caller withoSwitch to handsfree during a call 1. During a call press to put the call on the loudspeaker. To switch handsfree off and return the call to the earpiece, press again.

Redial Up to the last 5 telephone numbers called are saved in the redial list. You can then select any of the numbers to redial, delete or copy to the phonebook. Redial the last number cPress to delete any unwanted digits and then enter new ones using 2.Press and scroll to StoreNumber. the keypad. If the phonebook is full, the display 3. Press. Use. T o end the call, press again, or replace the

 
handset on the base or charger. Preparation dialling 1. Enter the number first. If you make a mistake, press to delete the last digit. 2. Press to dial. Earpiece volume During a call, you can use the and buttons to adjust the volume of the caller's voice in the earpiece. MUTE is displayed and your caller cannot hear you. Press again to resume your call. Receiving calls When you receive a call, the base and handset will ring. 1. To answer the call press. Or if the handset is on the base or charger, simply lift it to answer the call. Handset ringer volume When the phone is ringing, you can use the and buttons to adjust the handset ringer volume. There are 5 volume levels, or you can switch the ringer off. Getting started Place your BT Freestyle 610 close enough to a mains power and telephone socket so that the cables will reach. The handset range is up to 300 metres outdoors and 50 metres indoors in ideal conditions. The icon indicates when you are in range, it. Try to position the phone at least 1 metre away from the electrical appliances to avoid interference and help maximise the handset range. Setting up 1. Plug the power adaptor and telephone cable into the back of the base. Only use the cables provided with the product. 2. Plug the power adaptor into the mains power wall socket and switch the power on. Then slide the battery compartment cover into place. 4. Place the handset on the base to charge, the red Charging indicator will light up and you will hear a beep.

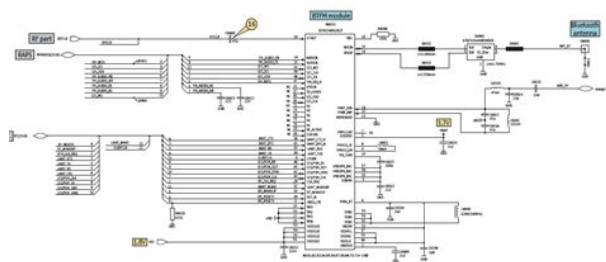

<http://www.drupalitalia.org/node/71018>

In the handset display you will see an animated icon which shows the handset is charging. Charge the handset for at least 24 hours before first use. 5. Once fully charged, plug the telephone line cord into the telephone wall socket. Set up your additional handsets 2, 3 and 4 Pack owners only 1. For each additional handset, plug the power adaptor into the back of the charger and plug the other end into the mains wall socket and switch the power on. 2. Insert the batteries into the handset, as detailed in point 3 above, and place the handset on the charger. The red Charging indicator will light up and the animated icon will be displayed. Charge the handset for at least 24 hours before first use. Each handset will display its own handset number 1, 2, 3 and so on. Your BT Freestyle 610 is now ready for use. Welcome This Quick Start Guide provides all the information you need to get your product up and running. Please fully understand this guide and follow the numbered steps below. REGISTER SELECT BASE REG BASE 4 Special features Your BT Freestyle 610 has some special features including handsfree, redial, a 30 number phonebook, a calls list and call waiting. Handsfree 1. Press the button on the side of the handset, list or the dial tone then dial the number. When handsfree is on, the icon is displayed. At any time during the call, press to switch between handsfree and the handset. Redial The last 10 numbers dialled are saved in the redial list. To quickly redial the last number dialled, press, then. Redial a number from the redial list 1. Press to open the redial list and scroll and to the number you want to redial. 2. Press to dial the number. Delete redial numbers 1. With the name or number you want to delete displayed, press. Ask your question here. Provide a clear and comprehensive description of the issue and your question.
 
<http://ezwaterpure.com/images/bosch-shy66c05uc-manual.pdf>

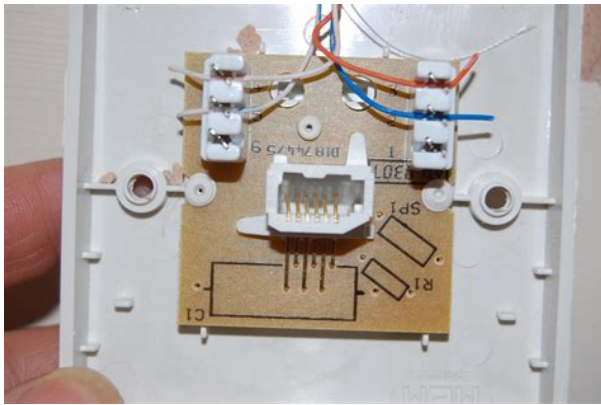

The more detail you provide for your issue and question, the easier it will be for other BT Freestyle 610 owners to properly answer your question. Ask a question About the BT Freestyle 610 Do you have a question about the BT Freestyle 610 or do you need help. Ask your question here BT Freestyle 610 specifications Brand ManualSearcher.com ensures that you will find the manual you are looking for in no time. Our database contains more than 1 million PDF manuals from more than 10,000 brands. Every day we add the latest manuals so that you will always find the product you are looking for. Its very simple just type the brand name and the type of product in the search bar and you can instantly view the manual of your choice online for free. ManualSearcher. com If you continue to use this site we will assume that you are happy with it. Read more Ok. Page 3 Section This User Guide provides you with all the information you need to get the most from your phone. Before you make your first call you will need to set up your phone. Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your BT Freestyle 710 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible ensures the best signal. Page 8 Getting started Battery low warning If the icon flashes in the handset display you will need to recharge the handset before you can use it again. You also hear a low battery warning beep once every 60 seconds. During charging, the icon will scroll in the display. Page 9 Getting started Setting up for multiple packs If you have purchased a BT Freestyle 710 multiple pack, you will need to prepare any additional handsets and chargers for use. For each additional handset and charger 1. Insert the cable through the channel at the rear of the charger and insert the plug into the power socket. Plug the other end into the mains wall power socket and switch on.

<http://www.fernandosued.com/images/bosch-silence-49-dba-manual.pdf>



When on a call, press once to mute the handset and again to switch the handset microphone back on. When in a menu, press to cancel and return to previous menu level. Phonebook Press to open the phonebook, page 22. In talk mode, press to switch handsfree speaker on and off, page 17. 1 BT Helpline In standby, press and hold to dial the BT Helpline, 0800 218 2182. Page 12 Getting to know your phone Base Find Press to ring all registered handsets, helpful for finding a missing handset, page 21. Also used during the registration process, page 43. Green Power light On power on. Red Charging light On when the handset is on the base. Flashes when the phone rings, during a call, during handset registration. Page 13 Getting to know your phone Navigating the menus Your BT Freestyle 710 has an easy to use menu system. Each menu has a list of options, which you can see on the menu map on the following page. When the handset is switched on and in standby 1. Press Up and Down buttons Press the and buttons on the side of the handset to scroll through the menu options. Switch handset on or off To switch off 1. Press and hold Call timer Your handset will automatically time the duration of all external calls. The handset display shows the call duration both during and for a few seconds after your call.. 2. Switch off is displayed, press Yes to confirm. To switch on 1. Press and hold. 2. Searching is displayed, then the screen will return to standby. Make an external call 1. Page 16 Using the phone Auto answer As long as you have auto answer set to ON you can answer a call by lifting the handset off the base. If you have switched auto answer off, you will need to press as well. Auto answer ON is the default setting. See page 32. Receive a call When you receive a call, the phone rings. The display shows the caller's number if available or the caller's name if it matches an entry in the phonebook. 1. Press. Call Waiting To switch your call waiting service on or off, see page 42.

There are 5 levels. 1. Press or to increase or decrease the volume. The and buttons can be found on the side of the handset. Secrecy Mute During a call, you can talk to someone nearby without your caller hearing. 1. Press. The display shows Mute on and your caller cannot hear you. 2. Press again to return to your caller. Page 18 Using the phone Answer a call handsfree When the phone rings 1. Press button to answer the call then press it again to switch to loudspeaker. Switch to handsfree during a call 1. During a call press to put the call on the loudspeaker. Redial the last number called 1. Page 19 Using the phone Redial a number from the redial list 1. Press, the last number you called is displayed. 2. Press 3. Press or to scroll to the number you want. to dial. Save a number from the redial list to the phonebook 1. Press. Scroll or to the number you want. 2. Press and scroll to Store Number. 3. Press. Use the keypad to enter a name. 4. Press. Scroll to select a Group if required. or 5. Press to save. Press menu level. Page 20 Using the phone Delete all redial numbers 1. Press. WARNING If the keypad is locked you will be able to dial the emergency numbers 999 and 112.

When the keypad is locked you can still answer incoming calls and operate the handset as normal. When the call is ended, the keypad lock comes on again. 2. Press and scroll to Delete All. 3. Press to confirm or to cancel. Keypad lock You can lock the keypad so that it cannot be used accidentally while carrying it around. To lock the keypad 1. Page 21 Using the phone Find handset Paging You can ring a handset to help locate it. Paging calls cannot be answered by a handset. 1. Press on the base. All handsets registered to the base will ring for up to 30 seconds. 2. Press on the base again to stop the ringing or press a button on any handset. New calls and messages alert When you have new answering machine messages or calls, your BT Freestyle 710 displays details to access.

<http://training-solutions.ro/wp-content/plugins/formcraft/file-upload/server/content/files/1626c29ba56b29---canon-powershot-a300-service-manual.pdf>

New call alert The screen shows New Call. Page 22 Phonebook Entering names Use the keypad letters to enter names, e.g. to store Tom Press once to enter T. Press three times to enter o. Press once to enter m. Writing tips Press or to move the cursor. Press to switch between upper and lower case. Only one character is changed at a time. Press to enter punctuation characters. Press to insert a space. Press to delete the last character or digit. You must enter a name to go with a number. Page 23 Phonebook View an entry 1. Press. The first entry is displayed. 2. Press and scroll to View. 3. Press. The first entry is displayed. Press to display the number. Press again to display the Group. 4. Press to dial the number or previous menu level. Dial an entry 1. Page 24 Phonebook Edit a name and number When editing a name or number, press to delete characters and digits. 1. Press 2. Press. and scroll to Edit Entry. 3. Press and edit the name. Press the number. 4. Press. If required, scroll and edit to the Group you want. 5. Press to confirm then menu level. Page 25 Phonebook Copy all entries 1. Press. You can copy the entire phonebook to another handset registered to the base. 2. Press and scroll to Copy All. 3. Press press and select the handset you want to copy to and. If the phonebook becomes full during copying the display shows Memory full. If copying is not successful the display shows Dir. Page 27 Phonebook Speed dial You can allocate a name and number from the phonebook to each of the Speed dial buttons to. Button has the BT Freestyle Helpline number stored already. To ask BT for help with using your phone, press and hold to ring the number. To copy a phonebook entry to a Speed dial 1. Press 2. Scroll. to Speed Dial and press. 3. Scroll or to the button number where you want to store the speed dial entry. Press. 4. Scroll or to confirm. To edit a Speed dial 1. Press. 2. Press 3. Scroll press and scroll or to Speed dial and press. To dial using a Speed dial 1.

Press and hold the Speed dial button number you wish to dial. Page 30 Settings Handset settings Handset ringtone Select the ringtone for External or Internal calls. Press There are five volume levels plus Off... 4. Scroll or to select External or Internal. Press 5. Scroll or to the ringtone you want. Page 34 Settings Choose from 5 base ringtones. There are 5 volume levels and Off. Base settings Ringtone and volume 1. Press 2. Scroll, scroll to Settings and press to Base settings. Press 3. Ringer is highlighted. Press 4. Scroll or... to the ringtone you want and press 5. Scroll to Ring volume. Press or off. or. to select the volume, 6. Press to save. 7. Press to return to the previous menu. Page 35 Settings System reset This resets your BT Freestyle 710 to its original settings. 1. Press, scroll to Settings and press 2. Scroll to Base settings. Press 3. Scroll to System reset. Press.. 4. Enter the system PIN 0000 and press 5. Press.. to confirm or BACK to cancel. If you confirm the handset returns to standby. Page 36 Settings 6. To set the date, scroll to Set date and press keypad to enter the date then press. 7. Press. Use the to return to the previous menu level. Scroll or to select Off, Once or Daily, then press. 5. Page 37 Calls lists 37 Caller Display If you have subscribed to a Caller Display Service, you will be able to see your caller's number on your handset display provided it is not withheld prior to answering the call. If your caller's name is stored in the phonebook and a number match is found, you will see the caller's name on the display instead. Calls list The Calls list holds up to 20 numbers. The date and time of the call is also stored if available.

Page 38 Calls lists When a Calls list is open, press to scroll from the newest call to the oldest, or press to scroll from the oldest call to the newest. Dial from the Calls list 1. Press the most recent entry is at the top of the list. 2. Press or 3. Press to scroll through the list.

All calls will list answered and missed calls in the Calls list. Missed calls will only list unanswered calls. Page 40 Calls lists Delete an entry 1. Press. 2. Press or to scroll through the list to the entry you want. 3. Press. Scroll shows Deleted. 4. Press to Delete and press. Display to return to the previous menu level. Page 41 BT Network Services By selecting the BT Services menu you can access a range of useful prestored numbers and further BT Calling Features. Press to call. 2. Scroll Press. Page 42 BT Network Services Call Waiting lets you know if another person is trying to contact you while you are on a call. If a second caller rings you will hear a beep in the handset. Providing you have also subscribed to Caller Display, the screen will show the caller's details. Your BT Freestyle 710 handset can also be registered to up to four other bases. You can then select the base you would prefer to use. If you have purchased a BT Freestyle 710 multiple pack any additional handsets come preregistered to the base. Page 44 Using additional handsets If registration is not successful first time, please repeat the process again in case the base registration period ran out of time. If there are already 5 handsets registered to the base, the registration will fail. You must deregister another handset before you can register the new one. 5. Enter the system PIN then press The handset is automatically assigned the next available handset number. Select base 1. Page 45 Using additional handsets 6. Display shows Deregistered! 7. Press to return to the previous menu level. Internal calls Call another handset If you have more than one handset registered to the base, you can make internal calls between two handsets. 1. Press and if you have one other handset it will ring. If you have extra handsets, press or to select the handset 15 you want to call, then press. Transfer a call You can transfer an external call to another handset registered to the base. 1.

Page 46 Using additional handsets If the other handset does not answer, press Single to return to your original caller. 3Way conference call You can hold a 3way conference call between 2 internal callers and 1 external caller 1. During your call, press. Your external caller is put on hold. 2. If you have one other handset it will ring. If you have extra handsets press or to select the handset 15 you want, then press. 3. When the other handset answers, you can announce the call. Check the prompts in the display or refer to instructions in this user guide. Page 51 General information IMPORTANT This equipment is not designed for making emergency telephone call when the power fails. Alternative arrangements should be made for access to emergency services. This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom. Replacing the handset battery After a time, you may find that the handset batteries are running out of charge more quickly. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock. Page 53 General information Guarantee Outside of the 12 month guarantee period Your BT Freestyle 710 is guaranteed for a period of 12 months from the date of purchase. If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. Page 54 General information Technical information How many telephones can I have. All items of telephone equipment have a Ringer Equivalence Number REN, which is used to calculate the number of items which may be connected to any one telephone line. Your BT Freestyle 710 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Page 55 Page 56 Offices worldwide The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Registered Office 81 Newgate Street, London EC1A 7AJ. Touch device users, explore by touch or with swipe gestures. Shop Account Wishlist Trolley Thank you for your continued patience and support. Our range

includes simple and stylish options in a range of colours and designs. Whether you need an extension kit or a conference call speakerphone for those days when you decide to work from home, take a look at our telephone accessories to find the solution. Just moved to a new house and got your landline up and running. A brandnew phone is the perfect finishing touch. Cordless phones give you the freedom to roam while you're on a call, so you can carry on with your household tasks while you pay that bill or book dentist appointment. A digital display with caller ID means you'll always know who's on the other end of the line. If your home has more than one floor, you might consider twin cordless phones for additional convenience. Why not go for one with a dedicated block button so you can crack down on those nuisance calls. Looking for something a little bit different. If you're on the move, then mobile phones will let you stay connected no matter where you are or what you're doing. Learn more here Buy online using We accept the following payment methods online Need Help. All Rights Reserved.

<http://www.drupalitalia.org/node/71020>