

**BJ-200e**

**USER  
MANUAL**

**File Name:** Canon bj200e manual.pdf

**Size:** 2767 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 10 May 2019, 23:14 PM

**Rating:** 4.6/5 from 801 votes.

**Download Now!**

Please check the box below to proceed.

---

**Canon**



I'm not a robot



reCAPTCHA  
Privacy - Terms

## Book Descriptions:

# Canon bj200e manual

***BJ-200e***

**USER  
MANUAL**

**Canon**

---

We appreciate your choosing this printer to meet your printing needs. It offers exceptional print quality, fast printing speeds, and troublefree operation with the convenience of compact size and low cost. TrueType Fonts The Canon TrueType Font Pack enhances your font capability and improves your print quality. Using This Manual You can use this manual to set up and operate your printer. It provides detailed information on all the features of the Bubble Jet Printer BJ 200e. Once you are familiar with the printer, you'll find the OnLine Guide helpful for finding quick answers to any questions you may have about basic operational functions. To order a copy of this manual, call the Canon help desk at 1800423 2366. Conventions. This allows you to talk with other users or send a message to Canon. Just type GO CANON at any CompuServe prompt. Canada Customer support for Canadian residents is available at 19057952083 from 9 A.M. If you are interested in an extended warranty, contact your Canon Authorized Service Facility to see if it offers such a service. Remove all the shipping tape and any Styrofoam packing material used to protect the printer during shipping. Also, save our sales receipt for proof of purchase. Choosing a Location for Your Printer Whether at home or in the office, you need to find a comfortable and convenient location for the printer. Using a longer cord or an extension cord may result in reduced voltage or malfunctions. Keep the printer and your computer away from potential sources of electromagnetic interference such as loudspeakers or the base units of cordless telephones. Examining the Printer Before setting up your printer, you should become familiar with its components and understand their functions. From the Front. Paper exit support Provides support when outputting lettersize sheets of paper. Parallel interface port Allows you to attach the printers interface cable. Inside the Printer Paper thickness lever Identifies the thickness of your paper. <http://doingbusinessinargentina.com/userfiles/dodge-avenger-owners-manual-2014.xml>

- **canon bj200e manual, canon bj200e manual pdf, canon bj200e manual download,**

canon bj200e manual free, canon bj200e manual downloads.


**BJ-200e**

**USER  
MANUAL**

**Canon**

---


The setting you choose adjusts the distance between the print head and the paper. Using the BC01 cartridge will result in decreased print quality. CAUTION Avoid touching the yellow mounting base on which you place the cartridge especially the circuit board on the side of the mounting base and the film cable that extends from the cartridge holder. Make sure there is no resistance when you press on the lock lever, and be sure no gap exists between the ink cartridge and cartridge holder. To ensure the best performance of your printer, you want to select the best paper and load it correctly. You can stack paper in the sheet feeder to load it automatically, or you can manually feed one sheet at a time. Always fan a stack of paper along the edge that will feed into the printer first. Make sure the stack of paper does not exceed the paper limit mark or the tab on the right side of the sheet feeder. NOTE Do not leave paper stacked in the printer for long periods of time; longer sheets of paper may become bent or curled over time. This may cause the paper to misfeed or jam. NOTE Selecting envelope mode cancels reduction mode if set. 3. Set the green paper thickness lever on the inside of the printer to the right. Then close the front cover. Press all the way around the envelopes to remove any curls and expel air from inside the envelopes. Also, press firmly on the area that corresponds to the edges of the flap. Do not use Canons CF101 or CF102 transparency film with this printer; these transparencies are designed for use with our color printers only. NOTE After printing on thick paper or envelopes, set the paper thickness lever inside the printer back to the left position before printing on normal paper. Also, set the paper selection lever to the back position. The POWER light will come on. When the printer is ready to print, the ON LINE light will come on. Pausing a Print Operation. You can perform a line feed or a form feed, or you can eject a sheet of paper. <http://www.muHong.cn/fckeditor/editor/filemanager/connectors/php/fckeditor/upload/202009/dodge-avenger-owners-manual.xml>

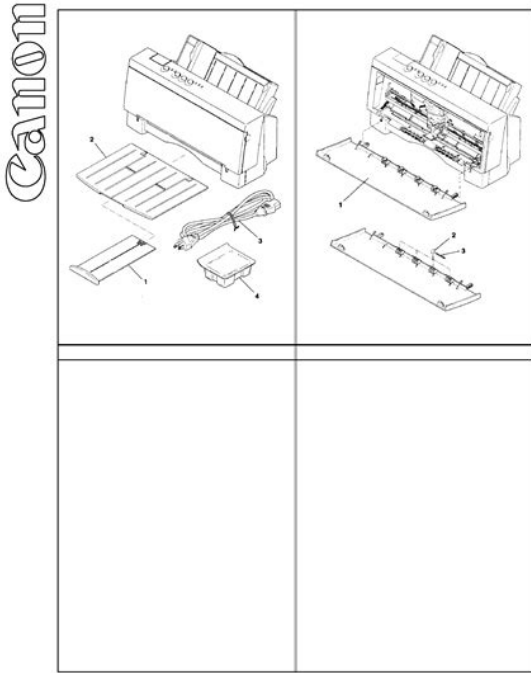

Form feeding If you are loading paper, make sure the printer is offline. Select your print mode as follows Use HQ mode for most of your printing needs. The printer automatically prints in HQ mode unless you change the mode with the PRINT MODE button. Be sure to account for your margins. Onehalf Reduction Mode In onehalf reduction mode, the printer automatically sets the print dimensions as follows Top margin Left margin Print width max.. Printing the Test Prints The printer includes three test prints the self test, the font list, and the demo print. Use these test prints to check the operation of the printer. Self Test You can print the self test in both printer control modes BJ10 mode or Epson LQ mode. The printer prints a repeating pattern of characters in the default print mode and pitch. The printer prints all characters in the available print styles and pitches. The printer stops printing, ejects the current sheet of paper, and goes back online. In BJ10 mode, the font list looks like this In Epson LQ mode, the pattern looks like this. Then, when the printer receives a carriage return code from the computer, it moves to the beginning of the. If you notice an extra blank line between each line printed, be sure to cancel this function. To cancel the automatic line feed function, turn off the printer. The Windows Driver and OnLine Guide diskettes contain a setup program called SETUP.EXE. This program automatically installs both the Windows driver and the OnLine Guide. You can choose to. Whenever you need information about the BJ200e, you can open the icon and look up the desired information. NOTE For faster printing operations in Windows, do not use the Windows Print Manager. Click on Help to enter the BJ200e Help program, which displays information that will help you specify your printer settings. From this screen you can select Halftone options and an Intensity level Click on the dropdown arrow next to the Halftone setting to.

NOTE If you select the BJ200e LQ driver, make sure you set DIP switch 11 to ON for Epson LQ mode. See Chapter 8, Customizing the Printer, for details. If they are unable to assist you, call the Canon help desk to see if a driver is available. BJ10 mode is the default. If you were able to select a Canon BJ printer or the IBM Proprinter X24E through your application program, you will want to use the printer in BJ10 mode. The BJ200e Window driver prints all text graphically. The following table lists the fonts and pitches that are available in each printer control mode. Call the Canon help desk at 18004232366 and ask for the fax retrieval system. Then request the BJ200e Printer Command Summary. How you enter the control codes and ESCape sequences depends on your application software. This includes guidelines, cleaning the printer, replacing the ink cartridge, and transporting

the printer. Printer Guidelines Follow these guidelines to avoid damage to your printer and harm to you or others Set the printer on a stable surface. Be very careful when cleaning the printer. Follow these steps 1. Clean the inside of the printer using compressed air pressure or a soft cloth to remove any ink mist or paper debris. Clean especially well around the platen area. Using the BC01 cartridge will result in decreased print quality. Do not vigorously shake the cartridge while handling it. Remove the ink cartridge from the printer only when necessary. CAUTION Keep the ink cartridge out of childrens reach; the ink contains isopropyl alcohol 67630. Slide off the orange protective cap from the print head and then remove the orange tape. NOTE Install the ink cartridge immediately after removing it from its protective packaging. 5. Make sure there is no resistance when you press on the lock lever, and be sure no gap exists between the ink cartridge and cartridge holder.

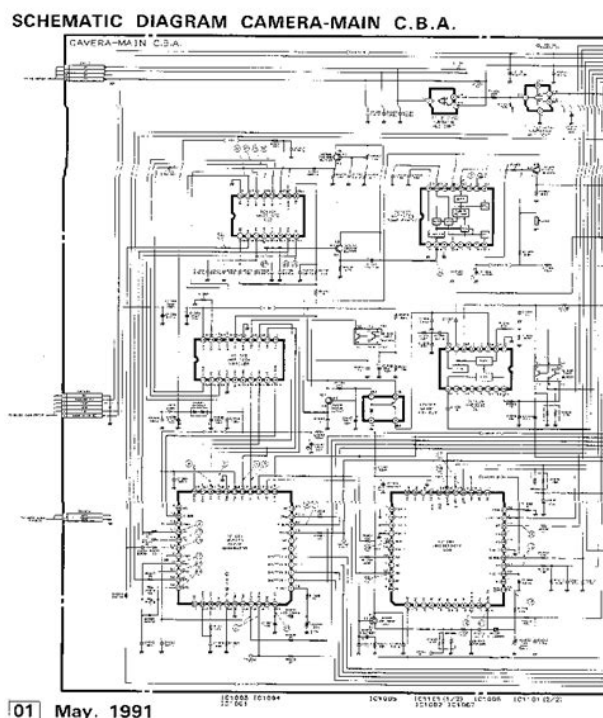

<https://www.becompta.be/emploi/3xx-plantronics-manual>

When you are not using the printer, make sure the ink cartridge is in its home position, which is on the right side of the printer. NOTE Always use the POWER button to turn off the printer. This ensures that the printer moves the print head to the home position and caps it. The printers components, such as the sheet feeder, may become damaged if subjected to severe vibration during transportation. NOTE Do not remove the ink cartridge from the printer or ship an ink cartridge from which you have removed the protective cap. An opened ink cartridge that is not installed in the printer may leak, and the print head may dry out. If your printer is not operating properly, try the suggestions in this chapter. The following list shows the problems covered here. Operational Problems. The staff at the help desk is trained in the technical support of Canons products and should be able to help you with your problem. If your printer requires service, the staff at the help desk can provide you with the telephone number of your local Canon Authorized Service Facility ASF. Follow these steps to determine the problem 1. Try these steps to clear the problem 1. Press the POWER button to turn off the printer. 2. Wait 15 seconds, and press the POWER button again to turn on the printer. Fan the stack of paper before placing in in the sheet feeder. Always fan a stack

of paper along the edge that will feed into the printer first. 2. Check that the paper rest is extended and the paper selection lever is in the back position for automatic loading of paper. The right side of the envelope is aligned against the right side of the sheet feeder. If this occurs, clean the platen by feeding a few sheets of paper through the printer. Call the Canon help desk at 18004232366 and ask for the fax retrieval system. With these settings, your printer emulates any Canon BJ printer and the IBM Proprinter X24E. This means you can use the printer with any software application that supports these printers.

<http://www.gasparedicaro.com/images/brother-intellifax-700-manual.pdf>



When DIP switch 11 is ON, the printer is in Epson LQ mode. Call the Canon help desk and request the fax retrieval system; then request the BJ200e Printer Command Summary. Automatic emulation mode is applicable for MSDOS applications only. When you are using Windows, the BJ200e printer driver for Windows selects the appropriate control mode regardless of the settings of DIP switches 11 and 12. To see samples of the character sets available in Epson LQ mode, use Canons tollfree fax retrieval system. Call the Canon help desk and request the fax retrieval system; then request the BJ200e Printer Command Summary. When this switch is ON, the printer is in Epson LQ mode. DIP switch 12 This switch enables or disables automatic emulation switching mode. The new DIP switch settings take effect when you turn on the printer. If you turn off or reset the printer, or if the printer receives the Set Initial Conditions command from a software program, the printer resets its. Call the Canon help desk at 1 8004232366 and ask for the fax retrieval system. Then request the BJ200e Interface Specifications. Ink Cartridge Type. Please try again. Please try again. Then you can start reading Kindle books on your smartphone, tablet, or computer no Kindle device required. Register a free business account If you are a seller for this product, would you like to suggest updates through seller support To calculate the overall star rating and percentage breakdown by star, we don't use a simple average. Instead, our system considers things like how recent a review is and if the reviewer bought the item on Amazon. It also analyzes reviews to verify trustworthiness. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Scroll down to see your support options.

<http://www.amedar.com/images/brother-intellifax-775-manual-free.pdf>



You can also click one of these links to search our extensive Knowledge Base or visit the Canon Community Forum. The driver may be included in your OS or you may not need a driver.

Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size

Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store. Contents. Chapter 1. Chapter 2. Chapter 3. Chapter 4. Chapter 5. Chapter 6. Chapter 7. Chapter 8. Appendix A. Introduction. Features and Benefits. Using This Manual. Customer Support. Servicing the Printer. Setting Up the Printer. Unpacking the Printer. Choosing a Location for Your Printer. Examining the Printer. Assembling the Printer. Loading Paper. Automatically Feeding Paper. Printing On Envelopes. Manually Feeding Thick Paper or Transparencies. Using the Operator Panel. Turning On the Printer. Pausing a Print Operation. Feeding Paper. Selecting a Print Mode. Using the Reduction Modes. Printing the Test Prints. Performing Automatic Line Feeds. Using the Printer With Your Software. Installing the Windows Printer Driver. Setting Up WordPerfect for Your Printer. Setting Up Other Software Applications. Software and Printer Compatibility. Maintaining the Printer. Printer Guidelines. Cleaning the Printer. Replacing the Ink Cartridge. Transporting the Printer. Troubleshooting. Operational Problems. Paper Loading Problems. Print Quality Problems. Printing Problems. Windows Problems. Customizing the Printer. Factory Default Settings. DIP Switch Setting. Changing a DIP Switch Setting. Printer Specifications. Congratulations on your purchase of the Canon Bubble Jet Printer BJ This chapter introduces you to the features of your new printer and Features and Benefits. The Bubble Jet Printer BJ200e produces highquality printing by Excellent print quality.

The printers highperformance print head offers 360 x 360 dots per inch The printer also produces excellent Convenient paper handling. An automatic sheet feeder holds up to 100 sheets of paper or 15 Software compatibility. Two resident printer control modes allow you to use the printer with a The print modes allow you to choose between print quality and speed Reduction mode. The printer offers two reduction modes for printing spreadsheets and In reduction mode, the printer High quality ink. The ink in the BC02 ink cartridge is not easily affected by light, dries Quiet printing. The nonimpact printing method offers quiet operation. Automatic capping system. To ensure troublefree operation, the printer automatically moves the Simple maintenance. The replaceable ink cartridge

contains both the ink and the print head; Compact desktop design Online documentation. A detailed OnLine Guide makes learning about the printer easy and fast TrueType Fonts. The Canon TrueType Font Pack enhances your font capability and Using This Manual. You can use this manual to set up and operate your printer. It provides If you set up the printer using the Quick Start Guide, you can read this Once you are familiar with the printer, you'll find the OnLine Guide The rest of this section describes the contents and conventions of this Contents. This manual includes all the information you need to set up and operate Chapter 1, Introduction. Introduces you to the features of the printer, and describes how this Chapter 2, Setting Up the Printer. Describes how to select a location for your printer, and how to unpack Chapter 3, Loading Paper. Describes how to select paper and how to load it into the printer. It also Chapter 4, Using the Operator Panel. Explains how to control your printer using the buttons on the operator Chapter 5, Using the Printer With Your Software. Describes how to use the printer with Windows. It also describes how to Chapter 6, Maintaining the Printer.

<http://test.uebersetzungen-nesselberger.de/wp-content/plugins/formcraft/file-upload/server/content/files/162707684d2720---boss-voice-transformer-vt-1-manual.pdf>

Describes how to clean the printer and replace the ink cartridge. Chapter 7, Troubleshooting. Provides procedures to help you solve problems that may occur with the Chapter 8, Customizing the Printer. Describes the printers DIP switches and explains how you can DIP switches. The appendix lists printer specifications. At the back of the book, you'll The Canon Bubble Jet Printer BJ200e Programmers Manual is available This Users Manual uses the following conventions to help you operate NOTE Notes provide advice or suggestions regarding the use of the CAUTION Cautions alert you to operations that could cause damage to In this manual, distinctive typefaces identify the printer buttons you The Buttons you press appear in this typeface POWER. The names of the lights you see appear in this typeface HQ. When you type something on your computer, it appears in this typeface. NOTE Although your printer supports some European paper and envelope Customer Support. Help desk. Canon provides customer support and service for all Canon printer Canon Computer Systems help desk at 18004232366. Help is A.M. to 5 P.M. Eastern Standard Time EST, except on holidays. If you seem to have an operational problem, try to solve it by referring If you cannot quickly Fax number. You can also send comments, suggestions, and technical questions to. Canon via facsimile. The number for this service is 17144383317, Be sure to state your question and Fax retrieval system. Canon is proud to announce a 24hour, tollfree fax retrieval system. You can use this service to get helpful documents faxed directly to your To access this service, call 1 Canon also provides a bulletin board service BBS, which is useful for Call 17144383325. The protocol for the BBS is up to 14,400 bps, eight data bits, one stop This allows you to talk with other users or send a message to Canon. Canada. Customer support for Canadian residents is available at 19057952083 In other countries, please contact your Canon dealer. Supplies.

[AYTEKINPOLATEL.COM/image/files/canon-zr500-instruction-manual.pdf](http://AYTEKINPOLATEL.COM/image/files/canon-zr500-instruction-manual.pdf)

To order supplies, call 18004232366. The Canon Bubble Jet Printer BJ200e is designed with the latest The warranty card that Be sure to read the Printer BJ200e needs servicing, call the Canon referral save the card. If Authorized Service Facility ASF nearest you. At the time of this manuals writing, Canon does not offer an extended If you are Service Facility to see if it offers such a service. Setting Up the Printer. This chapter describes the steps you follow to unpack and set up your If you have already set up your printer using the Quick Start Guide, you Unpacking the Printer. Carefully remove all items from the box. Canon Bubble Jet. Printer BJ200e BC02 ink cartridge. AC power cord. TrueType Font Pack Product Warranty Canada. Quick Start Guide. Registration Card. Windows Driver and. OnLine Guide If your printer was damaged in shipping, or if any items are missing, NOTE In addition to the items shipped with your printer, you need a As you unpack the printer, save the carton and packing materials in case Remove all the Open the front cover and remove the tape



that secures the ink cartridge. Choosing a Location for Your Printer. Whether at home or in the office, you need to find a comfortable and Follow the guidelines in this section. Place the printer in a cool, dry, clean, well ventilated area. Avoid Set the printer on a sturdy, level surface. Do not set the printer on Place the printer where the temperature is stable and set for Locate the printer near an electrical wall outlet that accepts a NOTE Use only the power cord that came with your printer. Using a Keep the printer and your computer away from potential sources. Make sure there is enough room around the printer for storing and Keep the paper exit area clear from objects that may block paper. Make sure there is enough room to fully extend the paper rest and The printer requires this much space. Before setting up your printer, you should become familiar with its From the Front Aligns paper in the sheet feeder.

You can adjust the guide for paper. Paper rest. Keeps the paper straight in the sheet feeder and helps prevent misfeeds. Extend this support before loading a stack of paper in the sheet feeder. Sheet feeder. Stacks up to 100 sheets of paper for automatic feeding. You can also Paper selection lever. Selects the appropriate paper setting. For loading multiple sheets of For envelopes Front cover. Allows access to the inside of the printer when you are installing the ink Paper exit support. Provides support when outputting lettersize sheets of paper. Pull out Operator panel. Controls the printer and defines basic printer operations. The various See Chapter 4, Using the Operator. Panel, for complete information on these buttons and lights. DIP switch cover. Protects the DIP switches. You use these switches to change the For information about changing the From the Back Allows you to attach the printers power cord. Parallel interface port. Allows you to attach the printers interface cable. Identifies the thickness of your paper. The setting you choose adjusts the There are two settings Ink cartridge holder. Allows you to install the ink cartridge as described later in this chapter. Now that you are familiar with the components of your printer, you are Installing the Ink Cartridge. You use the BC02 ink cartridge with this printer. Each ink cartridge NOTE Canon makes numerous ink cartridges; the BC02 is designed Do not touch the print head on the ink cartridge or the sharp Do not hold the ink cartridge, or place it on your table, with the Do not attempt to disassemble the cartridge. Do not vigorously shake the ink cartridge while handling it. CAUTION Keep the ink cartridge out of childrens reach; the ink contains To install the ink cartridge, follow these steps Hm protective packaging. Cautton and the film cable that extends from the cartridge holder. Make sure there is no resistance when you press on the lock lever, and Chapter 3.

This chapter describes how to load paper, envelopes, thick paper, and To ensure the best performance of your You can stack paper in the sheet feeder to load it automatically, or you The path that the paper travels Automatically Feeding Paper. Your printer produces letterquality print on most plain bond papers, This printer However, the print quality varies Purchase a small amount of paper and test it to see if it meets your You can automatically feed single sheets of plain papers. Thickness Less than 0.008 inches 0.2 mm When you are ready to load plain paper, follow the steps in this section. NOTE Set the paper selection lever to the front position only when. If it is set to the front Fan the paper before stacking it in the sheet feeder. Always fan a Do not force the paper into the If you are using a preprinted stock, such as letterhead, insert the NOTE Do not leave paper stacked in the printer for long periods of time; Printing On Envelopes. You can stack up to 15 envelopes in the sheet feeder. Before printing on CAUTION Some envelopes are not recommended because they may When you are ready to load envelopes, follow these steps The beeper NOTE Selecting envelope mode cancels reduction mode if set. Press all the way Also, press firmly on the area that Turning Off Envelope Mode. After printing on envelopes, follow these steps before printing on normal Use the envelope mode only when you are loading envelopes; do not use Manually Feeding Thick Paper or Transparencies. You use the manual feed feature when printing on paper that is a heavier. Use transparencies that are intended for use with ink jet printers. For Always feed transparencies manually. Use transparencies only in a normal operating environment.

High After printing on transparencies, feed at least two sheets of paper Do not use Canons CF101 or CF102 transparency film with this To manually feed a single sheet, follow these steps Align the sheet of paper or transparency with the right edge of the NOTE When printing on a transparency, insert the sheet so the The printer will automatically load the paper into position. Using the Operator Panel. You can control basic printer operations through the operator panel. The indicator lights reflect the current status and modes of the printer. If, for some reason, your application program does not perform these The following sections of this chapter describe how you use these Turning On the Printer. Press the POWER button to turn on the printer. The POWER light will Pausing a Print Operation. When the ON LINE light is on, the printer is online and ready to At this time, you can send print data If you want to pause a print operation, press the ON LINE button again The ON LINE light will go off and the printer Feeding Paper You can perform a line feed or a form feed, or Form feeding. If you are loading paper, make sure the printer is offline. Press the The application will tell the printer when to load paper.. Line feeding. When a sheet of paper is loaded and the printer is offline, press the. Press the button repeatedly Ejecting paper. To eject a sheet of paper, make sure the printer is offline, then press. The printer will Selecting a Print Mode. Your printer incorporates two print modes that allow you to choose Print Mode. Function. Speed at 10 cpi You use the PRINT MODE button to select the current print mode The default selection is HQ mode. Pressing The HS and. HQ lights indicate which mode is selected. Select your print mode as follows. The printer HQ mode. HS mode uses half the amount of ink as HQ mode. NOTE Normally, the default print mode is HQ. If you are in Epson. LQ mode DIP switch 1 1 is ON, and you select the Draft typeface with.

DIP switches 8, 9, and 10, the default print mode will be HS mode. Printer.. The printer supports two reduction modes for printing spreadsheets and In reduction mode, the printer Twothirds Reduction Mode. In twothirds reduction mode, the printer automatically sets the print Top margin Left margin Print width max. In the example above, you would specify a Be sure to account Onehalf Reduction Mode. In onehalf reduction mode, the printer automatically sets the print Top margin Left margin Print width max. In the example above, you would specify a Be sure to account for Selecting the Reduction Mode. We recommend that you use reduction mode with MSDOS applications Windows applications have a fitto Before using reduction mode, make sure you set DIP switch 2 to ON to To select the reduction mode, follow these steps The printer beeps twice and the The printer beeps once. When You can also turn off the printer. NOTE Selecting reduction mode cancels envelope mode if set, and Printing the Test Prints. The printer includes three test prints the self test, the font list, and the To print the test prints, you must be automatically feeding a stack of Self Test. You can print the self test in both printer control modes BJ10 mode or. Epson LQ mode. The printer prints a repeating pattern of characters in In BJ10 mode, the pattern is printed in Courier typeface at 10 cpi; the Starting. To start the self test, follow these steps Stopping. To stop the self test, press and hold the ON LINE and PRINT MODE The printer stops printing, ejects the current In BJ10 mode, the self test looks like this You can print this sample in both printer control modes BJ10 mode or. Epson LQ mode. The printer prints all characters in the available print Starting. To start the font list, follow these steps The printer starts to print the Stopping. To stop printing the font list, press and hold the ON LINE button for In BJ10 mode, the font list looks like this. BJ Mode Ver X.XX PrcjmrIjdiijil Morti Print.

In Epson LQ mode, the pattern looks like this. LQ Mode Ver X.XX Performing Automatic Line Feeds. You can set the printer so that it performs an automatic line feed each Then, when the printer receives a You only need to set this function if you are using an application To set the automatic line feed function, follow these steps If you notice an extra blank line between each line printed, be sure to To cancel the automatic line feed function, turn off the printer. Application programs include a group of programs, called printer Canon provides three BJ200e printer drivers one for Microsoft. Windows, one for WordPerfect version 5.1, and one for WordPerfect The easiest way to use your

printer is to install the Windows driver and If you have already installed this driver as described in the Quick Start. Guide, see the section Printer Setup Within Windows later in this If you use WordPerfect 5.1 or 6.0, see the section Setting Up. WordPerfect for Your Printer later in this chapter for information on If you are not using Windows or WordPerfect, see the section Setting. Up Other Software Applications later in this chapter for information Installing the Windows Printer Driver. This section describes how to install the Windows printer driver for the. BJ200e. The Windows Driver and OnLine Guide diskettes contain a You can choose to Follow these steps NOTE Make sure the Windows Control Panel is closed. OnLine Guide into disk drive A or your desired drive. OnLine Guide diskette and then click on OK. For example The SETUP program installs the Windows driver in the directory you Whenever you need Printer Setup Within Windows. After you install the Canon BJ200e printer driver, you can run the. Setup program. This is located in the Printers Control Panel. If you are using Windows 3.1, select the Setup button from the Printers When you start the Setup program, Windows displays the Canon BJ Si. From this screen, you can select the paper size, media type, paper A4 210 x 297 mm.

<https://ayurvedia.ch/3xx-plantronics-manual>